


SIP-T44U

Package Contents


The following items are included in your package. If you find anything missing, contact your system administrator.

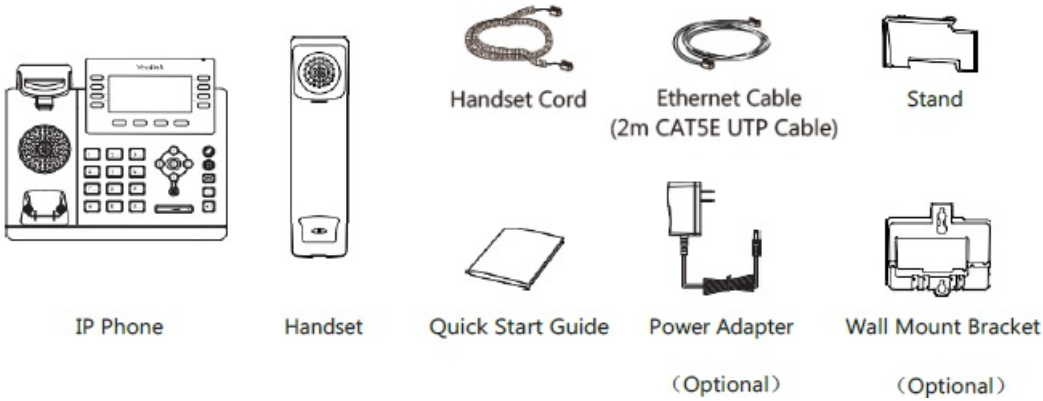

TIP
 We recommend that you use the accessories provided or approved by Yealink. The unapproved third-party accessories may result in reduced performance.

Assemble Phone


1. Attach the stand.

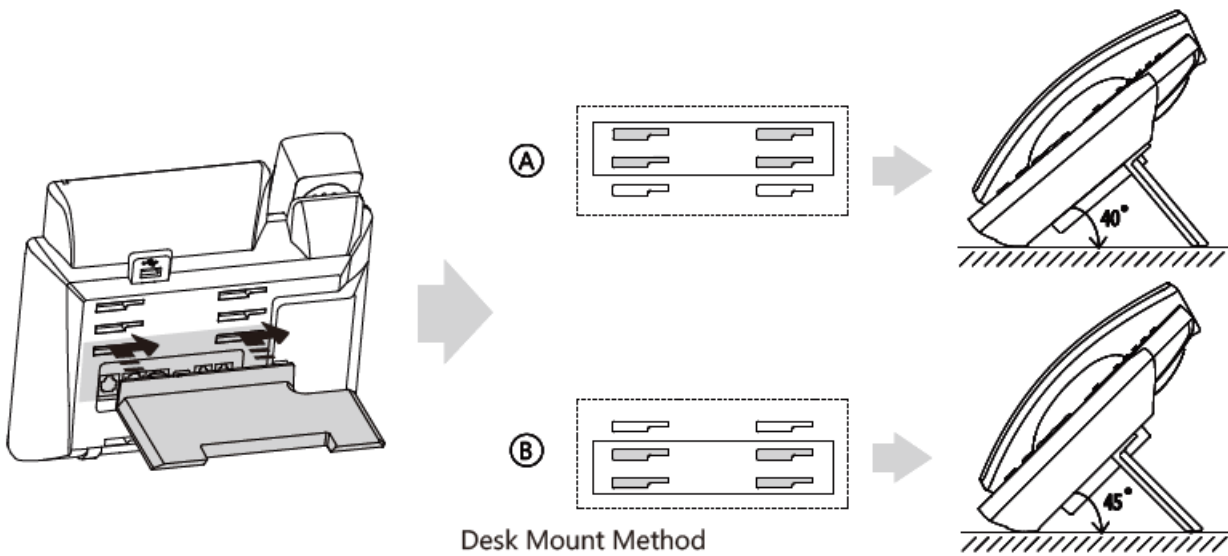

TIP

You can also mount the phone to a wall. For more information on how to attach the wall mount bracket, refer to Yealink Wall Mount Quick Installation Guide for Yealink IP Phones.


2. Connect the handset and optional headset.

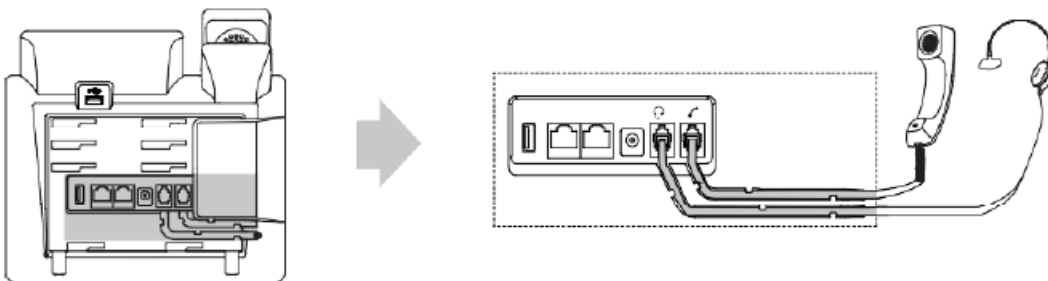

NOTE

The headset or wireless headset adapter EHS36/EHS40 should be purchased separately. EHS36/EHS40 is used for connecting the phone and a compatible wireless headset. For more information on how to use the EHS36 and EHS40, refer to Yealink EHS36 User Guide and Yealink EHS40 User Guide.

3. Connect the USB flash drive.

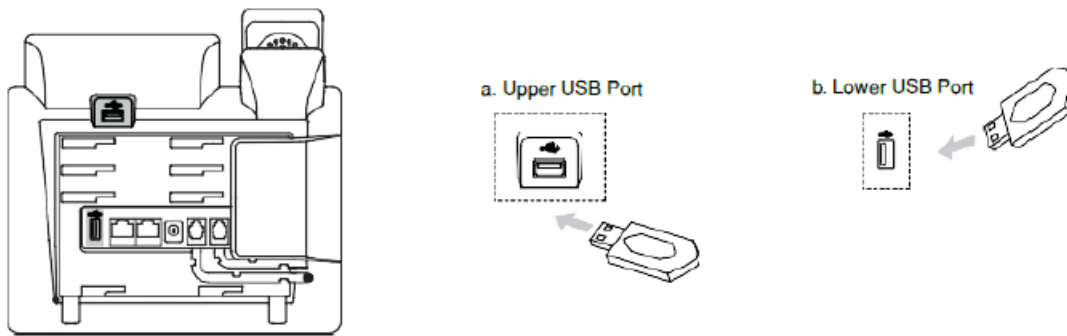


NOTE

The USB ports (Output voltage: DC 5 V/0.5 A) can also be used to connect to other USB devices, such as EXP43, USB headset and so on.

Yealink recommends that you connect Bluetooth USB dongle or Wi-Fi USB dongle to the upper USB port, and connect EXP43 to the lower USB port.

4. Connect the network and power.

You have two options for network and power connections. Your system administrator will advise you which one to use.

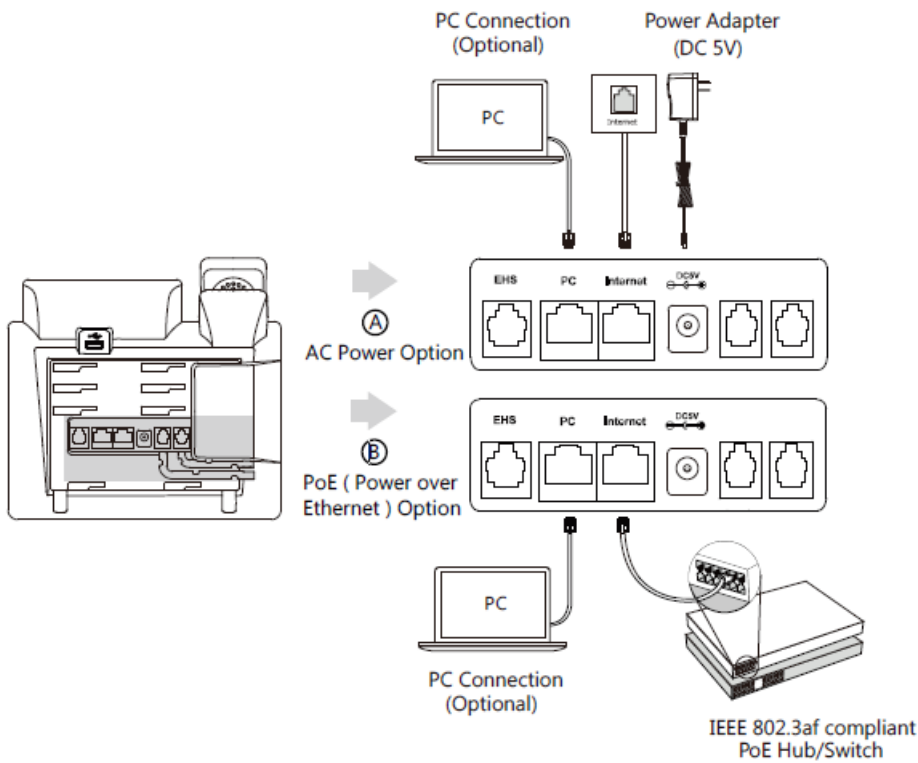

NOTE

- The IP phone should be used with Yealink's original power adapter (5V/2A) only. The use of the third-party power adapter may cause damage to the phone. If you are connecting a PC to your phone, we recommend using the Ethernet cable provided by Yealink.
- If inline power (PoE) is provided, you don't need to connect the power adapter. Make sure the hub/switch is PoE-compliant.